


DumpMaster Drain Valve EXT-50-12/24V Installation

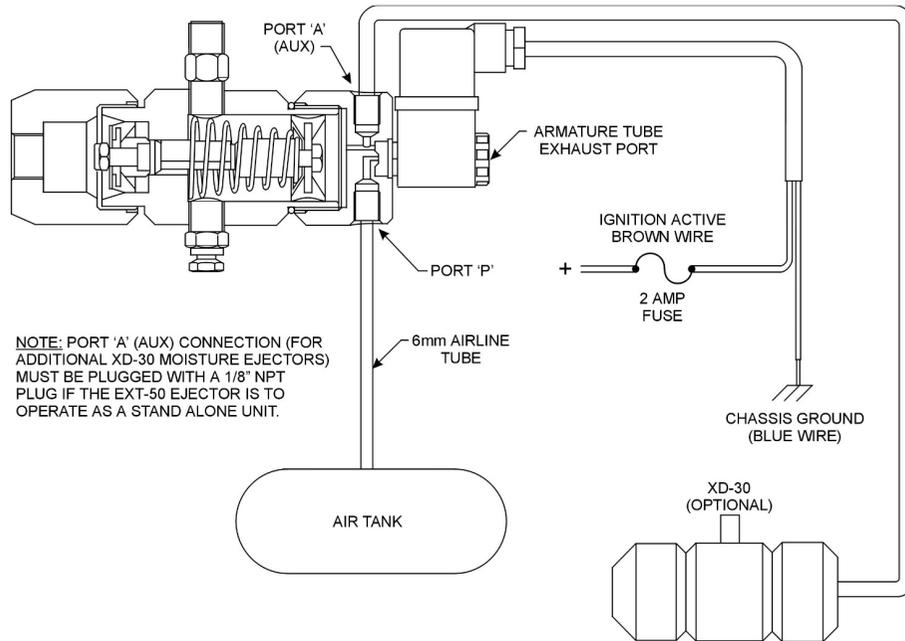

1. Connect a **constant** supply of air pressure to the "P" Port of the DumpMaster Drain Valve. If pressure for the "P" Port is to be taken from the same tank that the drain valve is draining, a non-return valve must be fitted to the tank and constant supply airline.
2. Connect the **Brown** wire (+) to **Ignition** power only.
3. Connect the **Blue** wire (-) to the chassis.
4. **NOTE!** The valve will actuate every six minutes when **ignition** power is on & the **engine** is running.

New Features

- Exhausts/Drains immediately when powered
(Waiting time of 6 minutes is no longer applicable upon commissioning of new installation)

- Green LED indicator visible when the timer is powered



- Timing circuit protected within the connector housing

- Transparent connector housing for LED indicators

- Red LED indicator visible during Exhaust/Drain cycle



- IP65 (Ingress Protection) Water and Dust Proof Rating



For use with:

- EXT-50 Electronic DumpMaster Series

General Pneumatics Pty Ltd trading as GP Truck Products

29 Hinkler Rd, Mordialloc, Vic, 3195

Ph: 03 9580 1811 Fax: 03 9580 1822

www.gptruckparts.com.au

sales@gptruckparts.com.au

